

# VigorAP 700 Quick Start Guide

Version: 1.21 Date: 27/04/2011

!!! This document is offered for VigorAP 700 v2 only. For the latest and correct firmware, please visit the DrayTek web site. Using the wrong firmware could make your unit inoperable.



## 1 Installing Your VigorAP 700

### Package Content


- VigorAP 700
- Quick Start Guide
- CD
- Antenna
- Power Adapter



LED	Status	Explanation
PWR	On	The device is powered on.
	Off	The device is powered off.
WLAN	On	WPS mode is enabled.
	Blinking	Data is transmitting (sending/receiving).
LAN	On	LAN is connected
	Off	LAN is disconnected.
	Blinking	Data is transmitting (sending/receiving).

Interface	Description
Reset/WPS	Restore the default settings. Usage: Turn on the VigorAP 700. Press the button and keep for more than 10 seconds. Then the AP will restart with the factory default configuration. Press the button and keep it less than 5 seconds, the WPS connection will be enabled.
LAN	Connector for local networked devices.
	Connector for a power adapter.

1. Connect VigorAP 700 to ADSL modem, router, or switch/hub in your network through the LAN port of the access point by Ethernet cable.
2. Connect a computer to ADSL modem, router, or switch/hub. Make sure the subnet IP address of the PC is the same as VigorAP 700, e.g., 192.168.1.X.
3. Connect the A/C power adapter to the wall socket, and then connect it to the PWR connector of the access point. Power on VigorAP and check all LEDs on the front panel. PWR LED should be steadily on, LAN LEDs should be on if the access point is correctly connected to the ADSL modem, router or switch/hub.

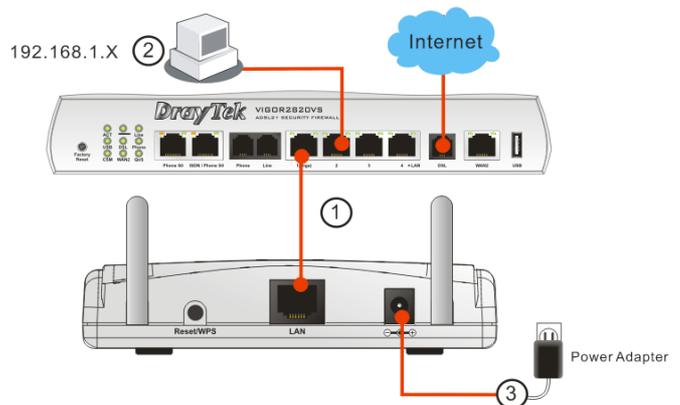

## 2 Web Configuration

To connect to VigorAP 700, the wireless client(s) must use the same SSID as VigorAP 700. The VigorAP 700 default settings are listed as follows:

Default Settings	Wireless Access Point
Device Name	VigorAP 700
SSID	DrayTek
Channel Number	11
IP Address	192.168.1.2
Login Username / Password	Admin / 1234

1. Start your computer.
2. Open a web browser on your PC and type http://192.168.1.2. A pop-up window will open to ask for username and password. Type the default values stated on the window and click OK for next screen.
3. The Main Screen will pop up. Please set the wireless LAN settings for using wireless function.
4. For detailed configuration of VigorAP 700, please refer to User's Guide.

