

DrayTek

VigorAP 810

802.11n Access Point



Quick Start Guide

V1.2

VigorAP 810 802.11n Access Point

Quick Start Guide

Version: 1.2

(For future update, please visit DrayTek web site)

Date: March 15, 2016

Warranty

We warrant to the original end user (purchaser) that the router will be free from any defects in workmanship or materials for a period of two (2) years from the date of purchase from the dealer. Please keep your purchase receipt in a safe place as it serves as proof of date of purchase. During the warranty period, and upon proof of purchase, should the product have indications of failure due to faulty workmanship and/or materials, we will, at our discretion, repair or replace the defective products or components, without charge for either parts or labor, to whatever extent we deem necessary to restore the product to proper operating condition. Any replacement will consist of a new or re-manufactured functionally equivalent product of equal value, and will be offered solely at our discretion. This warranty will not apply if the product is modified, misused, tampered with, damaged by an act of God, or subjected to abnormal working conditions. The warranty does not cover the bundled or licensed software of other vendors. Defects which do not significantly affect the usability of the product will not be covered by the warranty. We reserve the right to revise the manual and online documentation and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.

European Community Declarations

Manufacturer: DrayTek Corp.
Address: No. 26, Fu Shing Road, HuKou Township, HsinChu Industrial Park, Hsin-Chu, Taiwan 303
Product: VigorAP 810

DrayTek Corp. declares that VigorAP 810 is in compliance with the following essential requirements and other relevant provisions of R&TTE Directive 1999/5/EEC.

The product conforms to the requirements of Electro-Magnetic Compatibility (EMC) Directive 2004/108/EC by complying with the requirements set forth in EN55022/Class B and EN55024/Class B.

The product conforms to the requirements of Low Voltage (LVD) Directive 2006/95/EC by complying with the requirements set forth in EN60950-1.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device may accept any interference received, including interference that may cause undesired operation.

This product is designed for 2.4GHz WLAN network throughout the EC region and Switzerland with restrictions in France.



GPL Notice

This DrayTek product uses software partially or completely licensed under the terms of the GNU GENERAL PUBLIC LICENSE. The author of the software does not provide any warranty. A Limited Warranty is offered on DrayTek products. This Limited Warranty does not cover any software applications or programs.

To download source codes please visit:

<http://gplsource.draytek.com>

GNU GENERAL PUBLIC LICENSE:

 
<https://gnu.org/licenses/gpl-2.0>

Version 2, June 1991


For any question, please feel free to contact DrayTek technical support at support@draytek.com for further information.

1


Package Content




Quick Start Guide

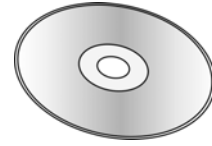 

CD

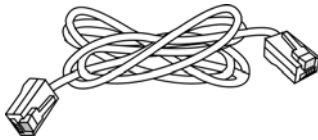 


RJ-45 Cable (Ethernet)

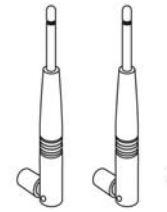 


Antenna

 
The type of the power adapter depends on the country that the router will be installed:

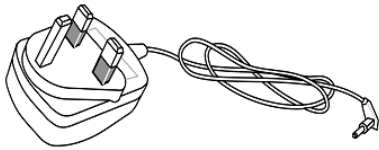


UK-type power adapter

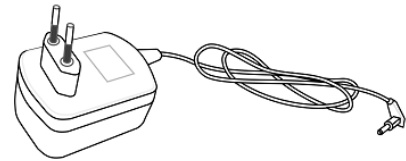 

EU-type power adapter

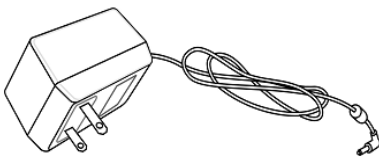 


USA/Taiwan-type power adapter

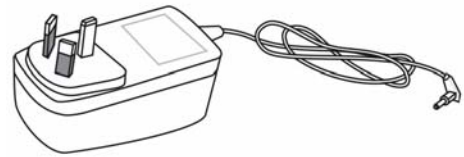 

AU/NZ-type Power Adapter

 
2

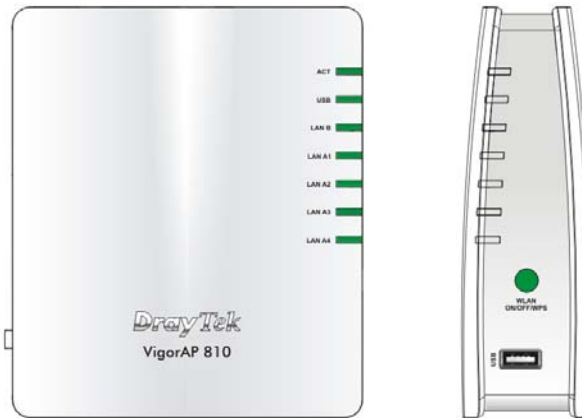


Descriptions of Components



LED	Status	Explanation
ACT	Off	The system is not ready or is failed.
	Blinking	The system is ready and can work normally.
USB	On	A USB device is connected and active.
	Blinking	The data is transmitting.
LAN B	On	A normal connection is through its corresponding port.
	Off	LAN is disconnected.
	Blinking	Data is transmitting (sending/receiving).
LAN A1 - A4	On	A normal connection is through its corresponding port.
	Off	LAN is disconnected.
	Blinking	Data is transmitting (sending/receiving).
WLAN (Green LED) on WLAN button	On	Press the button and release it within 2 seconds. When the wireless function is ready, the green LED will be on.
	Off	Press the button and release it within 2 seconds to turn off the WLAN function. When the wireless function is not ready, the LED will be off.
	Blinking (Green)	Data is transmitting (sending/receiving).
WPS (Orange LED) on WLAN button	Blinking (Orange)	When WPS function is enabled by web user interface, press this button for more than 2 seconds to wait for client's device making network connection through WPS. When the orange LED blinks with 1 second cycle for 2 minutes, it means that the AP is waiting for wireless

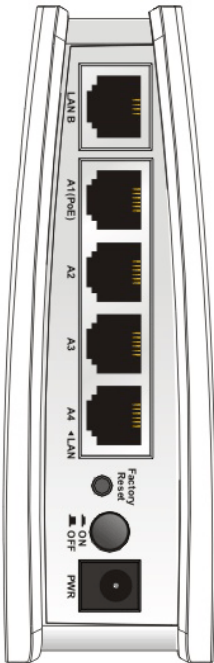 	client to connect with it.
USB	Connector for a printer.



Interface	Description
LAN B	Connector for xDSL / Cable modem or router.
LAN A1 (PoE) - A4	Connector for xDSL / Cable modem or router.
	Restore the default settings. Usage: Turn on the router. Press the button and keep for more than 10 seconds. Then the router will restart with the factory default configuration.
	ON/OFF: Power switch.
	PWR: Connector for a power adapter.

3

Installing Your Router

 
This section will guide you to install the AP through hardware connection and configure the settings through web browser.

Before starting to configure the router, you have to connect your devices correctly.

1. Connect VigorAP 810 to ADSL modem, router, or switch/hub in your network through the **LAN A** port of the access point by Ethernet cable.

***Note:** You can also connect VigorAP 810 to a Vigor router via wireless connection. For detailed information, refer to VigorAP 810 User's Guide.*

2. Connect a computer to other available LAN A port. Make sure the subnet IP address of the PC is the same as VigorAP 810 management IP, e.g., **192.168.1.X**.
3. Connect the A/C power adapter to the wall socket, and then connect it to the PWR connector of the access point.
4. Power on VigorAP 810.
5. Check all LEDs on the front panel. **ACT** LED should be steadily on, **LAN** LEDs should be on if the access point is correctly connected to the ADSL modem, router or switch/hub.

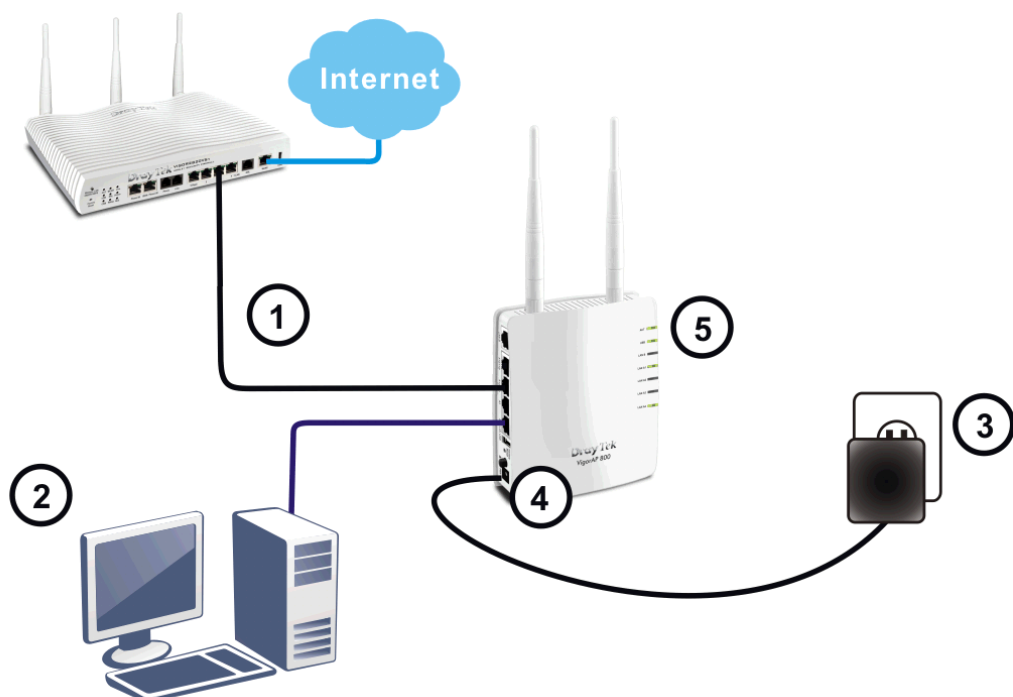


4

Configuring Web Pages

The **Operation Mode** is designed for you to easily set up your router for Internet access.

Note: Such VigorAP is treated as DHCP client. So, if it is connected as the figure on the previous page, the default IP will be changed and assigned by the DHCP server of Vigor router.

1. Make sure your PC connects to the router correctly.
2. Open a web browser on your PC and type **http://192.168.1.2** (for stand-alone installation). A pop-up window will open to ask for username and password. Please type “admin/admin” on Username/Password and click **Login**.

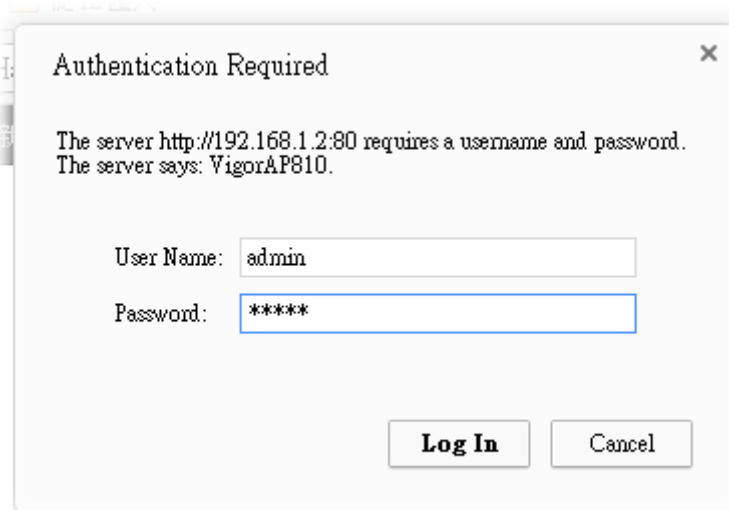


Authentication Required

The server http://192.168.1.2:80 requires a username and password.
The server says: VigorAP810.

User Name:

Password:

3. The **Main Screen** will pop up. Click **Quick Start Wizard**.

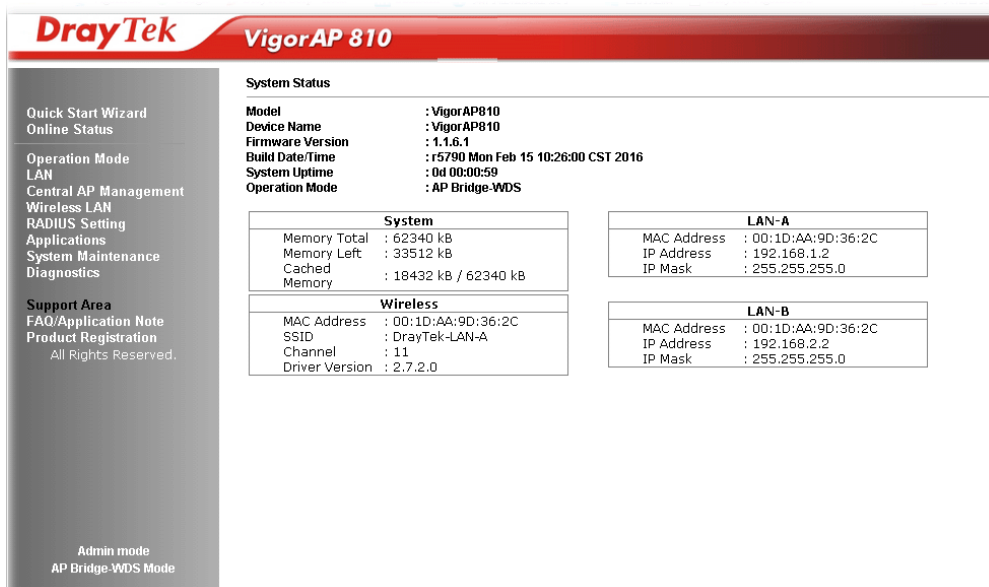

DrayTek VigorAP 810

Quick Start Wizard
Online Status

Operation Mode
LAN
Central AP Management
Wireless LAN
RADIUS Setting
Applications
System Maintenance
Diagnostics

Support Area
FAQ/Application Note
Product Registration
All Rights Reserved.

Admin mode
AP Bridge-WDS Mode

System Status

Model : VigorAP810
Device Name : VigorAP810
Firmware Version : 1.1.6.1
Build Date/Time : r5790 Mon Feb 15 10:26:00 CST 2016
System Uptime : 0d 00:00:59
Operation Mode : AP Bridge-WDS

System	
Memory Total	: 62340 kB
Memory Left	: 33512 kB
Cached	: 18432 kB / 62340 kB
Memory	

LAN-A	
MAC Address	: 00:1D:AA:9D:36:2C
IP Address	: 192.168.1.2
IP Mask	: 255.255.255.0

Wireless	
MAC Address	: 00:1D:AA:9D:36:2C
SSID	: DrayTek-LAN-A
Channel	: 11
Driver Version	: 2.7.2.0

LAN-B	
MAC Address	: 00:1D:AA:9D:36:2C
IP Address	: 192.168.2.2
IP Mask	: 255.255.255.0

4. The first page is set for 2.4G wireless connection. There are several operation modes for you to choose. Simply click any one of modes. In this example, choose **AP** and click **Next**.

Quick Start Wizard >> Wireless LAN (2.4GHz)

Operation Mode :
 VigorAP will connect to up to four VigorAPs which uses the same mode, and all wired Ethernet clients of every VigorAPs will be connected together. This mode is still able to accept wireless clients.

Wireless Mode :

Main SSID : Enable 2 Subnet (Simulate 2 APs)

Channel :

Extension Channel :

Station List :

AP Discovery :

Progress bar: Wireless(2.4GHz) [filled] Security(2.4GHz) [empty]

5. For the SSID configuration, choose the mode you want and type related information for client authentication. Then, click **Next**.

Quick Start Wizard >> 2.4G Security

SSID 1	SSID 2	SSID 3	SSID 4
SSID		DrayTek-LAN-A	
Wireless Security Settings			
Mode	<input type="text" value="Mixed(WPA+WPA2)/PSK"/>		
WPA Algorithms	<input type="radio"/> TKIP <input type="radio"/> AES <input checked="" type="radio"/> TKIP/AES		
Pass Phrase	<input type="text" value="....."/>		
Key Renewal Interval	<input type="text" value="3600"/>	seconds	
PMK Cache Period	<input type="text" value="10"/>	minutes	
Pre-Authentication	<input checked="" type="radio"/> Disable <input type="radio"/> Enable		

Progress bar: Wireless(2.4GHz) [filled] Security(2.4GHz) [empty]

6. In the next page, click **Finish**. The system will make a connection automatically.

Quick Start Wizard

Vigor Wizard Setup is now finished!

Basic Settings for VigorAP is completed.

Press Finish button to save and finish the wizard setup.

Note that the configuration process takes a few seconds to complete.

< Back

Finish

Cancel

Open **Online Status** to see the result of network connection. Now, VigorAP 810 is ready for any station to connect for accessing Internet.

Contacting DrayTek

If the router still cannot work correctly after trying many efforts, please contact your dealer for further help right away. For any questions, please feel free to send e-mail to support@draytek.com.

Safety Instructions

- Read the installation guide thoroughly before you set up the router.
- The router is a complicated electronic unit that may be repaired only by authorized and qualified personnel. Do not try to open or repair the router yourself.
- Do not place the router in a damp or humid place, e.g. a bathroom.
- The router should be used in a sheltered area, within a temperature range of +5 to +40 Celsius.
- Do not expose the router to direct sunlight or other heat sources. The housing and electronic components may be damaged by direct sunlight or heat sources.
- Do not deploy the cable for LAN connection outdoor to prevent electronic shock hazards.
- Keep the package out of reach of children.
- When you want to dispose of the router, please follow local regulations on conservation of the environment.